



Dell XPS 13 Wireless Card Replacement

Replace the Wireless Card in the Dell XPS 13

Written By: The Raptor





TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Wireless Card



- Remove eight T5 Torx screws
- Remove a Philips screw under the plastic tab

Step 2

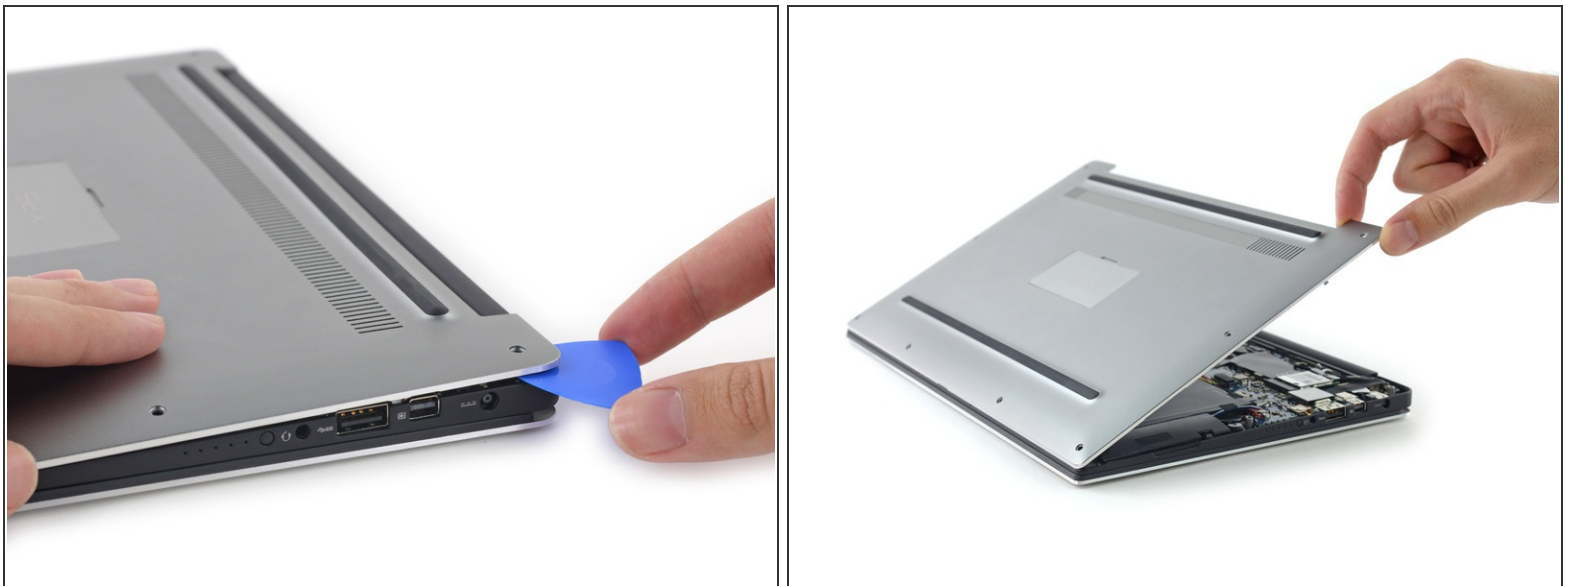



- Use opening picks to open the lower case

Step 3



- Disconnect the battery and move the battery cable out of the way

Step 4

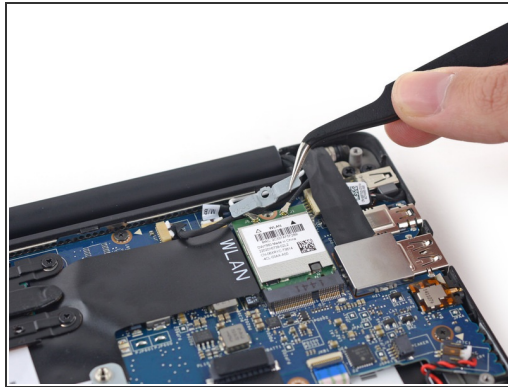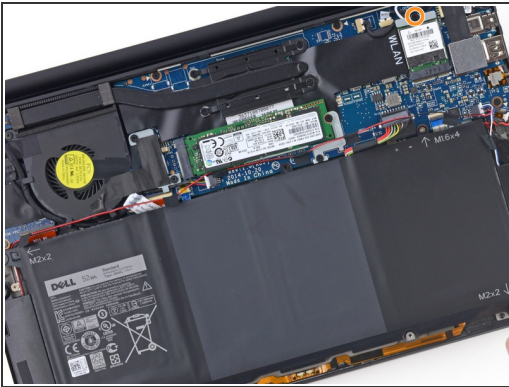

- Remove a Philips screw
- Use a pair of tweezers to remove a metal clamp holding the wireless card
- Use a spudger to disconnect a couple of antenna cables
- Pull the wireless card parallel to the motherboard

⚠ Do not lift the wireless card upward or risk damaging the wireless card slot

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-10 04:42:12 PM.